Regeneration Mode:

Typically, a system is set to regenerate at a time of low water usage—for example, when a household is asleep. If there is a demand for water when the system is regenerating, untreated water will be used.

When the system begins to regenerate, the display will change to include information about the step of the regeneration process and the time remaining for that step to be completed. The system runs through the steps automatically and will reset itself to provide treated water when the regeneration has been completed.

Manual Regeneration:

Sometimes there is a need to regenerate the system sooner than when the system calls for it, usually referred to as manual regeneration. There may be a period of heavy water usage because of guests or a heavy laundry day.

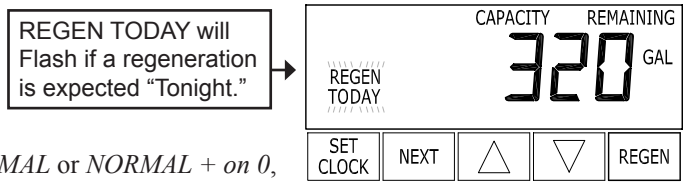

To initiate a manual regeneration at the preset delayed regeneration time when the Regeneration Time Option is set to *NORMAL* or *NORMAL + on 0*, press and release REGEN. The words *REGEN TODAY* will flash on the display to indicate that the system will regenerate at the preset delayed regeneration time. If you press REGEN in error, pressing the button again will cancel the request.
Note: If the Regeneration Time Option is set to *on 0*, there is no set delayed regeneration time, so *REGEN TODAY* will not activate if REGEN is pressed.

To initiate a manual regeneration immediately, press and hold REGEN for 3 seconds. The system will begin to regenerate immediately. The request cannot be canceled.

Note: For softeners, if brine tank does not contain salt, fill with salt and wait at least 2 hours before regenerating.

Set Time of Day:

The user can also set the time of day. Time of day should only need to be set after power outages lasting more than 8 hours, if the battery has been depleted and a power outage occurs, or when daylight saving time begins or ends. If a power outage lasting more than 8 hours occurs, the time of day will flash on and off, which indicates the time of day should be reset. If a power outage lasts less than 8 hours and the time of day flashes on and off, the time of day should be reset and the battery replaced.

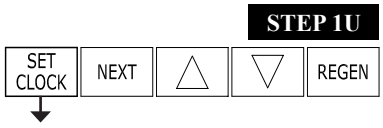

Step 1U—Press SET CLOCK.

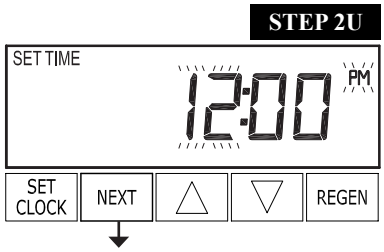

Step 2U—Current Time (hour): Set the hour of the day using ▼ or ▲. a.m./p.m. toggles after 12. Press NEXT to go to Step 3U. Press REGEN to exit Set Time of Day.

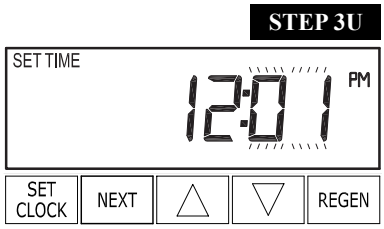

Step 3U—Current Time (minutes): Set the minutes of the day using ▼ or ▲. Press NEXT to exit Set Time of Day. Press REGEN to return to previous step.